



## TECHNICAL BULLETIN

# 08-04

### Wheel Hub Thrust Washer Installation

When assembling BPW hub units it is important that the thrust washer is fitted correctly.



(ECOPlus shown)

The surface (pictured) that has the identification must be positioned facing toward the roller bearing.

This side has rounded edges and allows free movement during the tightening process.

The reverse side may catch during the hub bearing adjustment process and will prevent the correct setting of the wheel bearing preload.

Consequently it is not possible to machine the washer if it is worn.